


Issue: 1
Date: 140306

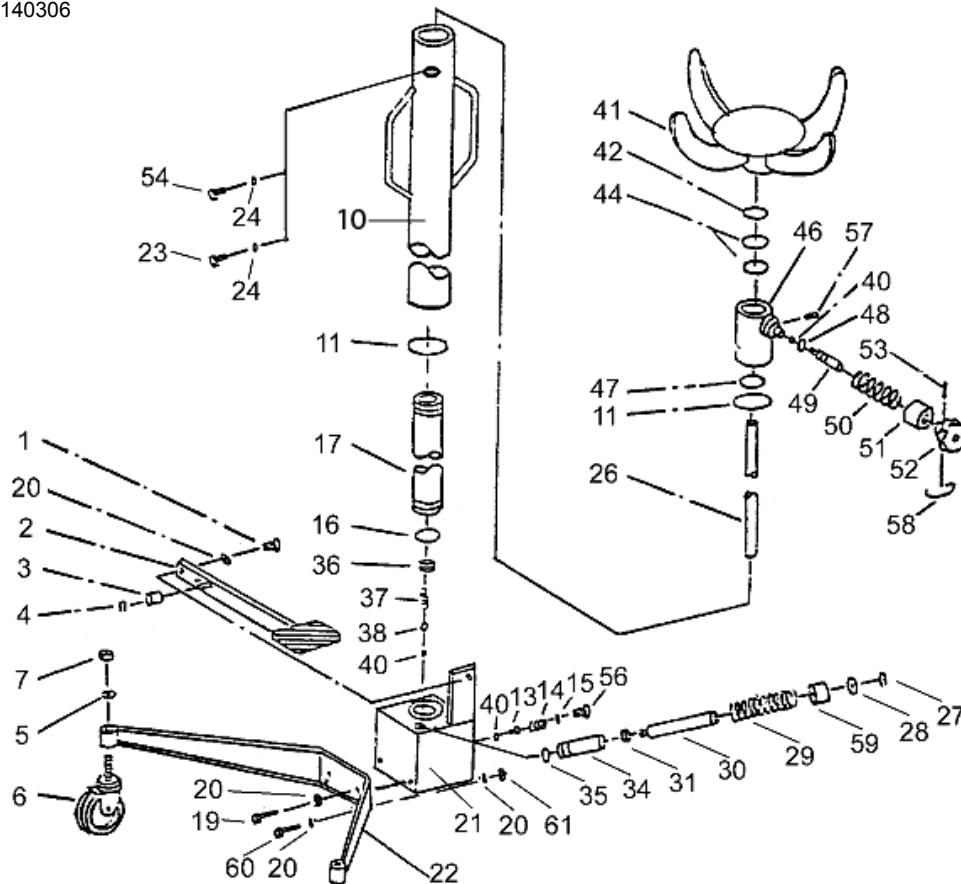

No.	PART No.	DESCRIPTION
1	1000TR.01	BOLT M10
2	1000TR.02	PEDAL
3	1000TR.03	BUSH
4	1000TR.04	CIRCLIP
5	1000TR.05	WASHER
6	1000TR.06	CASTOR WHEEL
7	1000TR.07	NUT M12
10	1000TR.10	RESERVOIR
11	1000TR.11	O-RING
13	1000TR.13	SPRING GUIDE
14	1000TR.14	SPRING
15	1000TR.15	O-RING
16	1000TR.16	O-RING
17	1000TR.17	CYLINDER
19	1000TR.19	BOLT M12*20
20	1000TR.20	WASHER
21	1000TR.21	PUMP
22	1000TR.22	LEGS
23	1000TR.23	AIR VENT VALVE
24	1000TR.24	O-RING
26	1000TR.26	PISTON
27	1000TR.27	CIRCLIP
28	1000TR.28	WASHER
29	1000TR.29	SPRING
30	1000TR.30	PUMP PISTON

No.	PART No.	DESCRIPTION
31	1000TR.31	V-RING
34	1000TR.34	PUMP UNIT
35	1000TR.35	O-RING
36	1000TR.36	SCREW
37	1000TR.37	SPRING
38	1000TR.38	STEEL BALL 9.5
40	1000TR.40	BALL 1/4"
41	1000TR.41	SADDLE
42	1000TR.42	DUST RING
44	1000TR.44	O-RING
46	1000TR.46	CYLINDER HEAD
47	1000TR.47	O-RING
48	1000TR.48	O-RING
49	1000TR.49	RELEASE ROD
50	1000TR.50	SPRING
51	1000TR.51	BUSH
52	1000TR.52	RELEASE KNOB
53	1000TR.53	SPLIT PIN
54	1000TR.54	SCREW
56	1000TR.56	SCREW
57	1000TR.57	SCREW M6*12
58	1000TR.58	CIRCLIP
59	1000TR.59	BUSHING
60	1000TR.60	BOLT M12*110
61	1000TR.61	NUT M12