



INSTRUCTIONS FOR

## LOCKING WHEEL NUT KEY SET 10PC-BMW & MINI

MODEL NO: **SX208**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to  
Instructions

### 1. SAFETY

- WARNING! DO NOT** use the tool if damaged or thought to be faulty.
- WARNING!** Ensure that Health & Safety, Local Authority Regulations and general workshop practice Regulations are adhered to when using tools.
- WARNING!** If jacking up a vehicle refer to manufactures instructions for vehicle and jack.
- \* **DO NOT** use the tool for a task it is not designed to perform.
- \* **DO NOT** use worn, or damaged sockets.
- \* **DO NOT** use the tool unless you have been instructed in its use by a qualified person.
- \* **DO NOT** operate the tool if you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✓ Maintain the tool in good condition.
- ✓ Follow all workshop safety rules, regulations and conditions.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and non essential persons away from the working area.

### 2. INTRODUCTION

Set of ten locking keys for the removal of locking wheel nuts on BMW and Mini vehicles.

### 3. CONTENTS

Component	Description
SX208.01	Locking Wheel Nut Key. (30/13PT)-BMW
SX208.02	Locking Wheel Nut Key. (31/15PT)-BMW
SX208.03	Locking Wheel Nut Key. (32/16PT)-BMW
SX208.04	Locking Wheel Nut Key. (33/17PT)-BMW
SX208.05	Locking Wheel Nut Key. (34/18PT)-BMW
SX208.06	Locking Wheel Nut Key. (35/19PT)-BMW
SX208.07	Locking Wheel Nut Key. (36/20PT)-BMW
SX208.08	Locking Wheel Nut Key. (37/21PT)-BMW
SX208.09	Locking Wheel Nut Key. (38/22PT)-BMW
SX208.10	Locking Wheel Nut Key. (40/23PT)-BMW

## 4. OPERATION

- 4.1. Choose correct locking wheel nut key for vehicle.
- 4.2. Place the key over the wheel nut/bolt and rotate until the key slots into the wheel bolt/nut.
- 4.3. Attach either a 17mm socket plus drive to the key and turn anti-clockwise to remove wheel bolt/nut.
- 4.4. To replace bolt/nut reverse removal operation. Use torque wrench to tighten.

## 5. MAINTENANCE

- 5.1. Keep keys clean and store in case provided.



Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to [www.sealey.co.uk](http://www.sealey.co.uk), email [sales@sealey.co.uk](mailto:sales@sealey.co.uk) or telephone 01284 757500.



### Environmental Protection

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment.

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group.  
Kempson Way, Suffolk Business Park,  
Bury St. Edmunds, Suffolk.  
IP32 7AR



01284 757500



01284 703534



[www.sealey.co.uk](http://www.sealey.co.uk)



[sales@sealey.co.uk](mailto:sales@sealey.co.uk)