



INSTRUCTIONS FOR

MOTORCYCLE BRAKE PISTON REMOVAL KIT-14PC

MODEL NO: **MS162**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
Instruction
Manual



Wear eye
Protection



Wear
Protective
Gloves

1. SAFETY


- **WARNING!** Wear appropriate Personal Protective Equipment. A full range of Personal Protective Equipment is available from your Sealey dealer.
- **WARNING!** Ensure that Health & Safety, Local Authority Regulations and general workshop practice Regulations are adhered to when using tools.
- × **DO NOT** use tools if damaged.
- ✓ Maintain tools to ensure that they are in an adequate condition for safe use and optimum performance.
- ✓ Ensure that a vehicle that has been raised by a jack is adequately supported.
- ✓ Wear suitable clothing to avoid snagging.
- × **DO NOT** wear jewellery. Tie back long hair.
- ✓ Account for all tools, parts and components being used.
- × **DO NOT** leave tools in or near the engine. Return tools to suitable storage after use.
- ✓ When not in use, store in a safe dry and childproof place.
- ✓ Keep children and unauthorised persons away from the work area.

2. INTRODUCTION

Extract brake calliper pistons without risk of damage to outer face of piston. Fast and simple operation. Features detachable slide hammer for impact removal. The kit includes 12 adaptors to suit different sized pistons.

3. SPECIFICATION

Model No.....MS162
Capacity.....Ø19-30mm

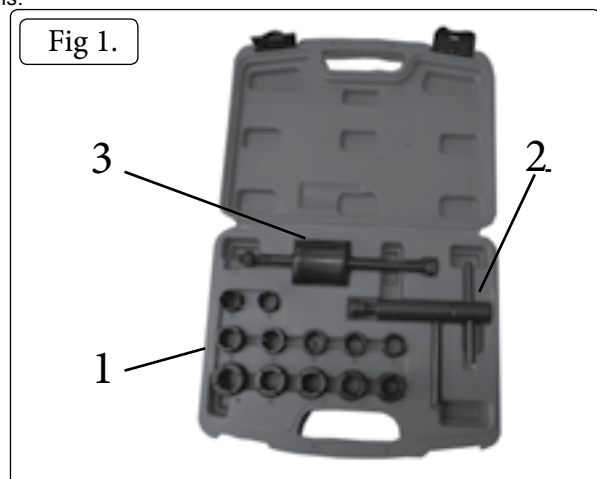

4. OPERATION

- 4.1. Select correct size adaptor for the job requirements. (fig.1.1).
- 4.2. Clamp brake calibre in soft jaw vice (fig.2).
- 4.3. Remove inner spindle by unscrewing from main body of tool (fig.1.2). Slide adaptor on to spindle slotted end first, reassemble tool.
- 4.4. Slide adaptor into Brake piston and tighten to clamp the adaptor inside the piston.
- 4.5. Screw slide hammer to end of tool (fig 2).
- 4.6. With care use the slide hammer for impact removal to pull the piston from the housing (fig 3).
- 4.7. Remove tool from piston in reverse order to above.

Fig 2.



Fig 3.



5. MAINTENANCE

- 5.1. Keep the tools clean and store in the case provided.
- 5.2. Store in a dry, childproof area.

Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to www.sealey.co.uk, email sales@sealey.co.uk or telephone 01284 757500.



Environmental Protection

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.
IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group.
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk.
IP32 7AR



01284 757500



01284 703534



www.sealey.co.uk



sales@sealey.co.uk