



BRAKE DISC LIP REMOVER SET

MODEL NO: VS0216

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



Wear protective gloves



Wear eye protection



Wear face mask

1. SAFETY

- ❑ **WARNING!** Ensure all Health and Safety, local authority, and general workshop practice regulations are strictly adhered to when using tools.
- ✗ **DO NOT** use tools if damaged or worn.
- ✓ Maintain the tools in good and clean condition for best and safest performance.
- ✓ Ensure that a vehicle which is jacked up is adequately supported with axle stands, ramps, etc. as appropriate.
- ✓ Wear suitable clothing to avoid snagging. **DO NOT** wear jewellery. Tie back long hair.
- ✓ Wear approved hand and eye protection and face mask. A full range of personal safety equipment is available from your Sealey stockist.
- ✓ Account for all tools and parts being used and do not leave them in or on the vehicle.
- ✓ When not in use, store in a safe, dry and child-proof location.
- ❑ **WARNING!** The warnings, cautions and instructions discussed in this document cannot cover all possible conditions and situations that occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.

IMPORTANT: Always refer to the vehicle manufacturer's service instructions, or proprietary manual, to establish the correct procedure and data. These instructions for use are provided as a guide only.


2. INTRODUCTION

Designed to remove the lip and corrosion that can form on the brake disc. The handle bolts to the hub and provides a smooth easy method of spinning the disc for effortless lip and corrosion removal. The set consists of crank handle, scraper and steel blades x2.

3. OPERATION

NOTE: Ensure you read and understand safety section above.

- 3.1. With the road wheel removed and the vehicle securely and safely raised, fix the crank handle to the wheel hub using the original fixings (either bolts or nuts).
- 3.2. To load the blade, unscrew the blade clamp from the handle and loosen it sufficiently to slide the blade in. Firmly retighten the clamp onto blade.
- 3.3. Brace the blade on the calliper, rotate the wheel using the crank handle while pressing the blade onto the disc lip or rim.

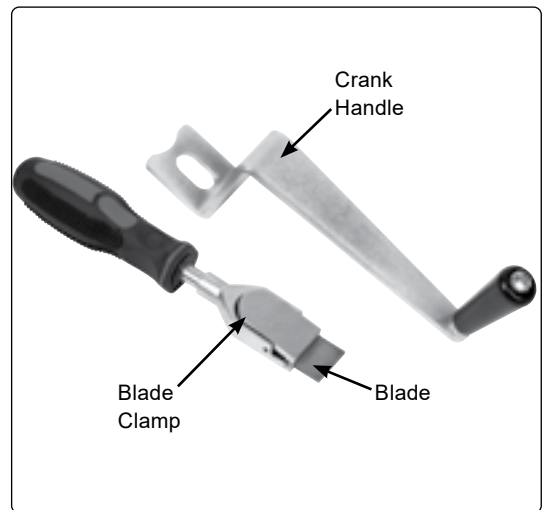



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.



Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk