



DUAL MODE HAND TORCH 3W & 2W COB LED

MODEL NO: **LED302**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions

1. SAFETY

1.1. GENERAL

- ✓ Ensure the torch is fully charged before initial use.
- ✗ **DO NOT** turn the torch on when it is being charged.
- ✗ **DO NOT** shine directly into your, other person's or an animal's eyes.
- ✗ **DO NOT** allow children to use the torch.
- ✗ **DO NOT** handle or move the torch whilst it is being charged.
- ✗ **DO NOT** use the torch if you suspect that the battery, the torch casing or the cable is damaged. Consult your Sealey Stockist.
- ✗ **DO NOT** leave battery in a discharged state, recharge battery immediately. Before storage, fully recharge the battery, subsequently recharge the battery at least once every six months of non-use.

1.2. BATTERY SAFETY

- WARNING!** To reduce the risk of burns or fire:
 - ✗ **DO NOT** attempt to open, dismantle, modify or service the battery pack.
 - ✗ **DO NOT** crush, puncture, short external contacts or dispose of in fire or water.
 - ✗ **DO NOT** expose to temperatures above 40°C or below - 10°C.
 - ✗ **DO NOT** expose to direct sunlight for long periods of time.
 - ✗ **DO NOT** expose to moisture.
- WARNING! DO NOT** place the torch face down while in use.
- ✓ Replace only with the battery pack designated for this product.
- ✓ Recycle or dispose of used battery as stipulated by local regulation.
- ✓ If the electrolyte in the cells gets on your skin, wash thoroughly with water. If it gets in your eyes, rinse thoroughly with cool water and seek immediate medical attention.

2. INTRODUCTION

Features spotlight and side floodlight modes. Produces up to 300 lumens. Maximum working time of 4 hours. Equipped with a 1200mAh battery. Beam can reach up to 200m. Charge time of 4 hours.

3. SPECIFICATION

Model No:..... LED302

Length:..... 160mm

Battery: Li-ion 18650 3.7V 1200mAh

Lumen Output: 300lm

Charging Time:..... 4hr


Nett Weight: 0.101kg

LED Type: 3W + 2W COB

Operating Time: End/Side 2.5hr/4hr

NOTE: the battery fitted to this torch is considered to be a consumable item and its ability to accept a charge will reduce over time. We will provide warranty against mechanical and electrical defect for a period of one year - this does not cover fair wear and tear. If the battery is not properly charged before first use, or regularly conditioned, its capacity will diminish. Under these circumstances we will not replace the battery regardless of whether the battery is less than one year old

4. OPERATION

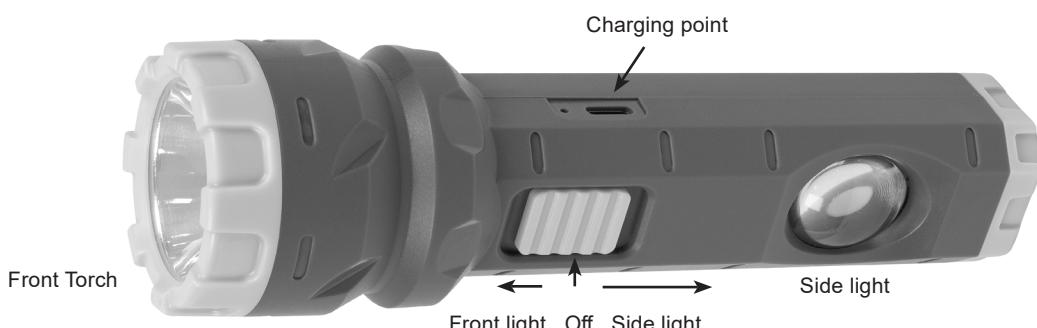

4.1. CHARGING

The torch should be fully charged before first use. Connect the charging cable into the charging port on the right of the torch. Plug into the power supply and turn on. The LED indicator will illuminate RED to show charging has commenced. When the battery has reached full charge, the LED will change to GREEN.

4.2. TURNING ON THE TORCH

- 4.2.1. Push the switch forward to turn on the front light.
- 4.2.2. Push it back to switch off.
- 4.2.3. Push the switch further back to activate the rear light.
- 4.2.4. Always point the lens away from your eyes before turning the light on.

5. MAINTENANCE

5.1. CLEANING

Keep the torch free from dirt and grease. Turn off before cleaning. Regularly clean with a damp cloth, lukewarm water and mild detergent. **DO NOT** clean with abrasive materials or harsh chemicals. **DO NOT** spray water on the product, **DO NOT** open enclosures to clean electrical parts.

5.2. STORAGE

Store the product in a cool, dry location. If the product is to be transported, place it in the original packaging.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR PURCHASE HERE



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



BATTERY REMOVAL

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd Batteries Producer Registration Number (BPRN) is BPRN00705.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK

Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk