



Issue: 1  
 Issue Date: 100311

ITEM	PART NO	DESCRIPTION	ITEM	PART NO	DESCRIPTION
1	EH15001.01	COVER FOR GRILLE	16	EH15001.16	THERMOSTAT
2	EH15001.02	GRILLE	17	EH15001.17	CONTROL BOX COVER
3	EH15001.03	MOTOR	18	EH15001.18	HEATING ELEMENT
4	EH15001.04	MOTOR FAN	19	EH15001.19	HEATING ELEMENT SUPPORT
5	EH15001.05	SENSOR	20	EH15001.20	INNER CASING
6	EH15001.06	HEATING ELEMENT SUPPORT	21	EH15001.21	CONNECT PLATE
7	EH15001.07	TIME-DELAY THERMOSTAT	22	EH15001.22	WHEEL
8	EH15001.08	THERMAL CUT-OUT	23	EH15001.23	WHEEL AXLE
9	EH15001.09	HANDLE	24	EH15001.24	FOOT SUPPORT
10	EH15001.10	CONTROL BOX	25	EH15001.25	OUTER CASING
11	EH15001.11	SOCKET	26	EH15001.26	BACK GRILLE
12	EH15001.12	SWITCH KNOB	27	EH15001.27	COVER FOR BACK GRILLE
13	EH15001.13	SWITCH RING	28	EH15001.28	INSULATION RING
14	EH15001.14	THERMOSTAT KNOB	29	EH15001.29	HANDLE GRIP
15	EH15001.15	SWITCH			

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.

**INFORMATION:** For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.