




Instructions for:
2.5 TON AXLE STANDS
 Model No: **AS2500**

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

 **IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY.**


1. SPECIFICATION

- 1.1. **AS2500** Capacity2.5 tons per stand (5 tons per pair)
 Min. Height345mm
 Max. Height505mm



N.B. IN ORDER TO OBTAIN THE MAXIMUM CAPACITIES SHOWN, THE VEHICLE MUST BE EVENLY SUPPORTED BY THE TWO STANDS.

2. SAFETY INSTRUCTIONS

- ✓ Ensure axle stands are in good order and condition. **DO NOT** use if damaged.
- ✓ Apply handbrake and chock wheels before jacking and using stands (put automatics in 'Park').
- ✓ Raise centre column to required height and fully insert pin. Ensure the dead centre of stand crutch is located under vehicle jacking point. Refer to vehicle handbook for jacking points.
- ✓ **DANGER!** *Great care must be taken to ensure you lower the vehicle slowly and carefully onto the centre of the axle stands.*
- ✓ Ensure that vehicle and stands are stable before starting work.
- ✗ **DO NOT** use on soft ground or tarmacadam. Use on concrete only.
- ✗ **DO NOT** use single stand. Only use in pairs.
- ✗ **DO NOT** support more than the maximum capacity, as written on the axle stands.
- ✗ **DO NOT** use 4 stands on one vehicle.
- ✗ **DO NOT** jack one end of vehicle if the other end is already on stands or the load will topple.
- ✗ **DO NOT** use for three wheeled vehicles or trailers. Refer to manufacturer's instructions.
- ✗ **DO NOT** use stands if damaged.

 **WARNING!**
DO NOT OVERLOAD THE AXLE STANDS BEYOND RATED CAPACITY. OVERLOADING CAN CAUSE DAMAGE TO, OR FAILURE OF, THE AXLE STANDS. POSITION LOAD ON CENTRE OF CRUTCH ONLY. ALWAYS USE STANDS IN PAIRS ON A HARD LEVEL SURFACE CAPABLE OF SUSTAINING THE LOAD. USE OF STANDS ON OTHER THAN HARD LEVEL SURFACES CAN RESULT IN LOAD INSTABILITY AND POSSIBLE LOSS OF LOAD. DO NOT USE ON TARMACADAM. FAILURE TO FOLLOW THESE INSTRUCTIONS, MAY RESULT IN DAMAGE TO AXLE STANDS, LOSS OF LOAD - RESULTING IN PROPERTY DAMAGE, SERIOUS PERSONAL INJURY AND/OR LOSS OF LIFE.

3. USE


- 3.1. Refer to vehicle handbook for correct jacking procedure. Check to ensure manufacturer's recommended jacking points are in good condition.
- 3.2. Position stands under specified support points and adjust to the required height.
 **WARNING! ENSURE THAT THE 'U' PIN HAS PASSED RIGHT THROUGH THE COLUMN SO THAT BOTH ENDS ARE VISIBLE. IN THE HIGHEST POSITION BOTH ARMS OF THE 'U' PIN MUST PASS THROUGH THE CRUTCH TUBE - THERE MUST NEVER BE MORE THAN FOUR HOLES VISIBLE ABOVE THE STAND TUBE.**
- 3.3. Carefully and slowly lower load onto stands. Ensure load bearing points sit in the centres of the stand crutches and that the stands are stable.
 **DANGER!** *You must follow instructions carefully and DO NOT load stand off centre. Failure to heed these warnings may cause damage and/or injury or loss of life!*





4. MAINTENANCE & INSPECTION

- 4.1. Before each use, check that stands and stand welds are not cracked and that there are no missing or damaged parts.
Any suspect axle stand must be removed from service immediately.
- 4.2. Due to the potential hazards associated with stands, do not misuse, or make any modification to, the stands or components.
- 4.3. It is the responsibility of the owner to ensure that the operator has read these instructions, together with the safety features on the side of the stand, and that the operator is familiar with the use and limitations of the stands.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.
IMPORTANT: No liability is accepted for incorrect use of this equipment.
WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.
INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

 **Sole UK Distributor, Sealey Group,**
 Bury St. Edmunds, Suffolk.

 01284 757500  01284 703534 **E-mail: sales@sealey.co.uk**



We, the sole importer into the UK, declare that the product listed below is capable of supporting the loads as shown below.

2.5 TON AXLE STANDS
Model: AS2500

Maximum safe load per stand 2.5 tons
Maximum safe load per pair 5.0 tons

The construction file for this product is held by the Manufacturer and may be inspected, by a national authority, upon request to Jack Sealey Ltd.

Signed by Mark Sweetman

A handwritten signature in black ink, appearing to be "Mark Sweetman", written over a circular stamp or mark.

6th September 2001

For Jack Sealey Ltd. Sole importer into the UK of Sealey Quality Machinery.



Sole UK Distributor, Sealey Group,
Bury St. Edmunds, Suffolk.

01284 757500

01284 703534

E-mail: sales@sealey.co.uk