




1. Attach the castors to the bottom of the trolley using 4 bolts per castor.
NOTE: Swivel castors should be mounted at the same side as the handle (left hand side)

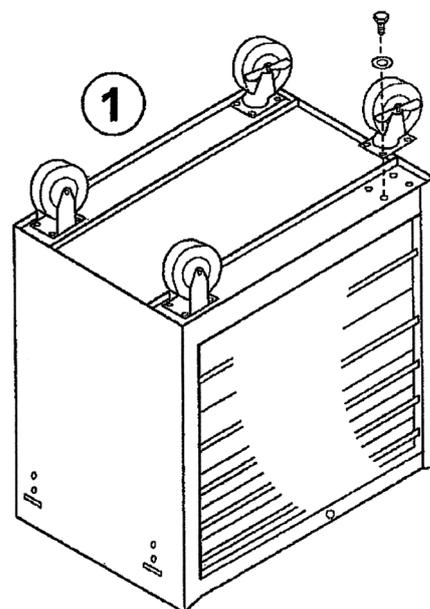

2. Insert the side mounted handle into the cabinet and attach with 4 bolts and washers.
NOTE: The side handle should be mounted on the same side as the swivel castors (left hand side)

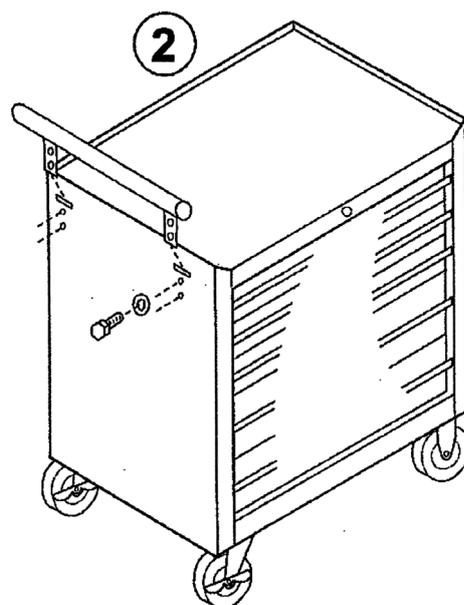

3. To remove a drawer with roller sliders, pull the drawer completely out, press down the left tab and lift up the right tab, pull drawer off the slides.
To reinstall the drawer, realign with the internal drawer slide and push until it locks in place.

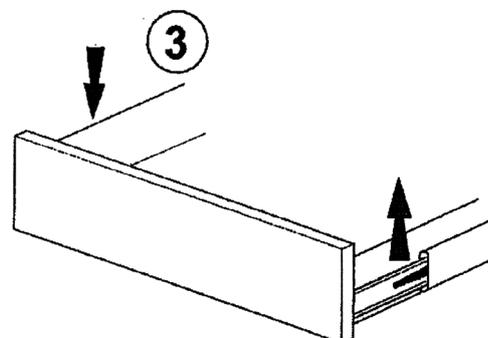

MAINTENANCE: Periodically lubricate castors and tighten all nuts/bolts.

IMPORTANT: To avoid tipping, open one drawer at a time and close and secure all drawers when moving.