



INSTRUCTIONS FOR:
**AIR ADHESIVE STRIPE
REMOVING TOOL PREMIER**
MODEL No: **SA95.V3**

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- WARNING!** Ensure Health & Safety, local authority and general workshop practice regulations are adhered to when using this equipment.
- WARNING!** Disconnect from air supply before changing accessories or servicing.
- ✓ Maintain the tool in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Use genuine parts only. Non-authorised parts may be dangerous and will invalidate the warranty.
- ✓ Use in a suitable clean and tidy work area, free from unrelated materials and with adequate lighting.
- ✓ Before each use check pad for condition. If worn or damaged replace immediately.
- ✓ Ensure the pad rating is the same as, or greater than, the RPM rating of the tool.
- ✓ Ensure there are no flammable or combustible materials near the work area.
- WARNING!** Always wear approved eye or face and hand protection when operating the tool.
- ✓ Use face, dust, or respiratory protection in accordance with COSHH regulations.
- ✓ Depending on the task, noise levels may exceed 87dB in which case wear safety ear defenders.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings and other loose jewellery and contain and/or tie back long hair.
- ✓ Wear appropriate protective clothing and keep hands and body clear of working parts.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and unauthorised persons away from the work area.
- ✓ Check moving parts alignment on a regular basis.
- ✓ Ensure workpiece is secure before operating the tool. Never hold a workpiece by hand.
- ✓ Check the workpiece to ensure there are no protruding screws, bolts, nuts, nails, stones, etc.
- ✓ Avoid unintentional starting.
- WARNING!** Ensure correct air pressure is maintained and not exceeded. Recommended pressure 90psi.
- ✓ Keep air hose away from heat, oil and sharp edges. Check air hose for wear before each use and ensure that all connections are secure.
- ✓ Prolonged exposure to vibration from this tool poses a health risk. It is the owner's responsibility to correctly assess the potential hazard and issue guidelines for safe periods of use and offer suitable protective equipment.
- ✗ **DO NOT** use the tool for a task it is not designed to perform.
- ✗ **DO NOT** operate tool if any parts are damaged or missing as this may cause failure and/or personal injury.
- WARNING! DO NOT** use on any materials containing asbestos.
- ✗ **DO NOT** carry the tool by the hose, or yank the hose from the air supply.
- ✗ **DO NOT** operate tool when you are tired, under the influence of alcohol, drugs or intoxicating medication.
- ✗ **DO NOT** carry the tool with your finger on the power lever.
- ✗ **DO NOT** direct air from the air hose at yourself or others.
- ✓ When not in use disconnect from air supply and store in a safe, dry, childproof location.

2. INTRODUCTION & SPECIFICATION

2.1. Introduction

Composite cover moulded around lightweight aluminium alloy housing reduces effects of chill on operator's hands and provides added control. Air motor with quality bearings for smooth and powerful operation. Exhaust outlet adjusts 360° keeping air flow away from operator. Ideal for removing pinstripes or double-sided tape from panel prior to refinishing. Suitable for the professional workshop.

2.2. Specification

Free Speed2500rpm
Operating Pressure90psi
Air Consumption.....4cfm
Air Inlet.....1/4" BSP

Noise87dBA
Vibration1.9m/s²
Weight1kg
Spare Pad Part No.SA95/PX

3. PREPARATION FOR USE


3.1. Air Supply

WARNING! Ensure the air supply is clean and does not exceed 90psi while operating the tool. Too high an air pressure and unclean air will shorten the product life due to excessive wear and may be dangerous, causing damage and/or personal injury.

- 3.1.1. Ensure the air valve (or trigger) is in the "off" position before connecting to the air supply.
- 3.1.2. You will require an air pressure of 90psi, and an air flow according to specification.
- 3.1.3. Drain the air tank daily. Water in the air line will damage the tool **and will invalidate your warranty**.
- 3.1.4. Clean air inlet filter weekly. Recommended hook-up procedure is shown in fig.2.
- 3.1.5. Line pressure should be increased to compensate for unusually long air hoses (over 8metres). The minimum hose diameter should be 1/4" internal diameter and fittings must have compatible dimensions.
- 3.1.6. Keep hose away from heat, oil and sharp edges. Check hoses for wear, and make certain that all connections are secure.

3.2. Couplings

Vibration may cause failure if a quick change coupling is connected directly to the tool. To overcome this, connect a leader hose to the tool (Sealey ref: AH2R or AH2R/38). A quick change coupling may then be used to connect the leader hose to the air line recoil hose. See fig.1 & fig.2.

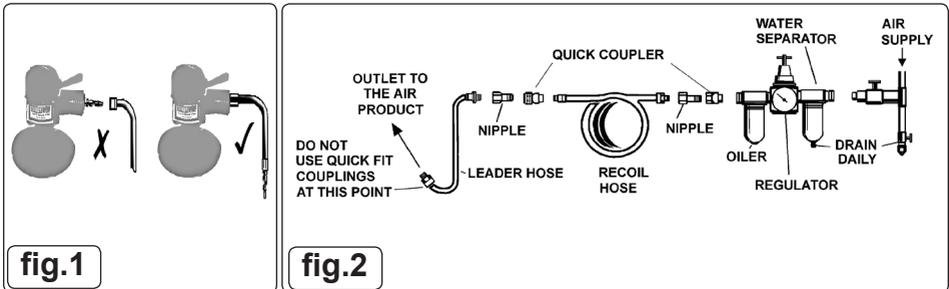

4. OPERATING INSTRUCTIONS

WARNING! Ensure you read, understand and apply Section 1 safety instructions.

4.1. Assembly

- 4.1.1. Screw composite pad fully onto shaft of removing tool. Use only pads with speed ratings equal to or higher than the speed rating of the tool. A spanner is provided to hold the shaft during pad removal.
- 4.1.2. Connect air supply to tool and press control valve lever (push safety catch forward) to check for correct operation.
- 4.1.3. The air flow may be regulated by the control valve lever.

